

BEFORE YOU CALL THE REPAIR MAN

If the microwave oven is not working:

- 1) Ensure that oven is properly connected to the electrical grid. If not, disconnect the power plug from the electric power socket, wait 10 seconds and then reconnect it.
- 2) Check that a short circuit has not occurred causing the circuit breaker to shut off. If the above mentioned points are in order, check the power socket using a different appliance.
- 3) Check that you have set the proper values on the control panel.
- 4) Check that the door is properly closed using the safety door locking system. Otherwise microwaves will not be produced.

IF THE ABOVE MENTIONED STEPS DO NOT HELP, CONTACT A QUALIFIED REPAIR MAN. DO NOT ATTEMPT TO MODIFY OR REPAIR THE MICROWAVE OVEN YOURSELF.

TECHNICAL SPECIFICATIONS

Nominal voltage range:	230 – 240 V
Nominal frequency:	50 Hz
Rated power:	1200 W
Microwave power output:	700 W
Operating frequency:	2450 MHz
Noise level:	63 dB(A)
Outside dimensions:	452 mm (w) x 358 mm (d) x 262 mm (h)
Internal dimensions:	315 mm (w) x 297 mm (d) x 198 mm (h)
Oven volume:	20 l
Weight:	approx. 10.5 kg
Plate diameter:	24.5 cm

The declared noise emission level for this appliance is 63 dB(A), which represents level A of the acoustic power relative to the reference acoustic power of 1 pW.

Included contents

Microwave oven
Rotating ring
Rotating glass plate

Amendments to text and technical parameters are reserved.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.