



Instructions for use
COFFEE MAKER

COFFEE MAKER



CM 413

COFFEE MAKER

TABLE OF CONTENTS

4	CATLER RECOMMENDS SAFETY FIRST
8	KNOW YOUR CM 413 COFFEE MAKER
10	OPERATING YOUR CM 413 COFFEE MAKER
12	CARE AND CLEANING



Congratulations

on the purchase of your new CM 413 coffee maker.

CATLER RECOMMENDS SAFETY FIRST

We understand how important safety is, so from the initial concept to the actual production, we think about your safety first and foremost. Nevertheless, please be careful and follow the instructions below when using the plate warmer.

- This appliance is not to be used by children. Keep this appliance and its power cord out of children.
- This appliance may be used by persons with reduced physical, sensory or mental abilities or lack of experience and knowledge, provided they are supervised or have been instructed in the safe use of the appliance and understand the potential hazards.
- Children must not play with the appliance.
- Cleaning and maintenance by the user must not be carried out by unsupervised children.
- If the power cord is damaged, have it replaced in a professional service centre in order to prevent a dangerous situation. It is forbidden to use the appliance with the power cord damaged.
- This appliance is designed for household use only. It is not intended for use in premises such as:
 - kitchenettes in stores, offices and other workplaces;
 - agriculture;

- guests in hotels, motels and other dwelling locations;
- bed and breakfast businesses.

- **WARNING:**

DO NOT IMMERSE THE KETTLE, THE BASE, THE POWER CORD OR THE POWER CORD PLUG IN WATER OR ANY OTHER LIQUID.

- WARNING: Avoid spilling on the plug.
- Wash the glass kettle in warm water with a little dishwashing liquid, rinse and wipe dry with a clean cloth.
- WARNING: Incorrect use may lead to injury.
- WARNING: The surface of the heating element contains residual heat after use.
- Always disconnect the appliance from the power supply when leaving it unattended and before assembly, disassembly or cleaning.
- Use the kettle only with the supplied base.

- **REMINDER:**

NEVER FILL THE KETTLE ABOVE THE MAX MARK AS HOT FOAMY COFFEE CAN OVERFLOW DURING BREWING.

- The appliance must not be placed in a cabinet when in use.

- **WARNING: Do not use the appliance if the surface is cracked.**

- Use the appliances according to the instructions in this user's manual. Failure to do so may result in injury, damage to the appliance or a dangerous situation.
- The appliance is intended exclusively for the preparation of drip coffee. Use the appliance only for the purpose for which it is intended.
- Before connecting the appliance to the mains socket, make sure that the nominal voltage indicated on the rating plate matches the mains voltage of the socket.
- Connect the appliance only to a properly grounded socket. For safety reasons, we don't recommend using adaptor plugs or extension cords.
- Do not place the appliance on window sills, sink drains or unstable surfaces. Always place it on a stable, flat and dry surface.
- Do not place the appliance on an electric or gas hob or near an open flame.
- Never use the appliance in the near vicinity of a bath, shower or swimming pool.
- Use the appliance only with the original accessories supplied with it.
- Only use the appliance with the glass kettle that comes with it. Do not overfill the glass kettle, place it on other heat sources or use it to heat liquids or food in the microwave.
- Do not use the appliance with a glass kettle that is cracked. If the kettle shows any signs of damage, it must be replaced with a new one.
- Hot steam may rise from under the lid during operation. For this reason, leave at least 20 cm of free space above the appliance.
- Always use only clean, cold water. Do not use heated water or other liquids. The maximum capacity is 240 ml.
- Before switching on the appliance, make sure that the kettle is filled with sufficient water and the lid is properly fitted. The water level must not exceed the maximum level.

WARNING:

- Do not remove the lid during the coffee brewing process. Do not touch the hot kettle. This could cause burns. Use the handle to lift and carry the kettle.
- Take extra care when handling the kettle filled with hot liquid to avoid scalding.
- Never pour cold or ice-cold water into the hot kettle. This could damage it.
- Switch off the appliance and allow it to cool for 10 minutes before reusing.
- The appliance is equipped with a thermal safety fuse that automatically breaks the electrical circuit if it overheats. If this occurs, unplug the appliance from the mains socket and allow it to cool down. Once the appliance has cooled down, you can use it again. Do not fill the kettle with cold water to cool the heating element quickly.
- Always switch off the appliance and unplug it from the mains socket if you are not going to use it, if you are leaving it unattended, before dismantling or assembling it, before filling the kettle, before moving it or before cleaning it. Allow the appliance to fully cool down before cleaning or moving.
- Keep the appliance and its accessories clean. Cleaning and maintenance should be carried out according to the instructions in the chapter Care and cleaning. Do not wash the appliance under running water or immerse it in water or other liquids.
- Never move the appliance with a filled kettle on the base.
- Make sure that the power cord does not come into contact with a hot surface and be careful not to spill the power plug.

- Disconnect the appliance from the mains socket by pulling the plug, not the power cord. Otherwise, damage to the power cord or the socket could occur.

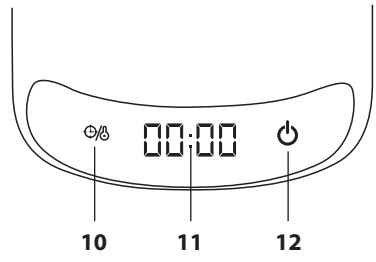
IMPORTANT SAFETY INSTRUCTIONS FOR USING ELECTRICAL EQUIPMENT



- Fully unwind the power cord before use. Connect the appliance only to a properly grounded socket.
- Do not leave the power cord hanging over the edge of a table or countertop or allow it to touch a hot surface or to become tangled up.
- For safety reasons, we recommend that the appliance is connected to a separate electrical circuit, isolated from other appliances. Do not use a splitter or extension cord to connect the appliance to a mains socket.
- Do not use this appliance in moving vehicles or boats, do not use it outdoors, do not use it for any purpose other than that for which it is intended. Failure to do so may result in injury.
- Any maintenance other than routine cleaning must be entrusted to an authorised Catler service center. To avoid the risk of electric shock, do not repair and/or make any adjustments to the appliance by yourselves.
- We recommend that you install a current protector (standard safety switches in your socket) to ensure increased protection when using the appliance. We recommend that a current protector (with a rated residual operating current of no more than 30 mA) be installed in the electrical circuit in which the appliance will be connected. Contact your electrician for further professional advice.

Instructions are also available at www.catler.eu

FOR DOMESTIC USE ONLY.

KNOW YOUR CM 413 COFFEE MAKER



1. Lid
2. Stainless steel filter for ground coffee
3. Filter gasket
4. Spout
5. Glass kettle
6. Non-adhesive heating plate
7. Base
8. Control panel
9. Handle
10. Button:  used to set the extraction time / activate the temperature retention function
11. Numeric display
12. Button:  used to switch the coffee maker on/off.
13. Cleaning brush
14. Measuring cup for ground coffee

OPERATING YOUR CM 413 COFFEE MAKER

BEFORE FIRST USE

Remove all packaging and advertising labels from the appliance before first use.

Wash the lid, gasket, stainless steel filter and measuring cup in warm water with a little dishwashing liquid, rinse with clean water and wipe dry. Put the gasket back on the stainless steel filter.

Rinse the glass kettle with clean water and wipe dry.

Wipe the base with a dry cloth.



WARNING:
TO AVOID THE RISK OF ELECTRIC SHOCK OR IRREVERSIBLE DAMAGE TO THE PRODUCT, DO NOT WASH OR IMMERSE THE GLASS KETTLE OR BASE IN WATER OR OTHER LIQUID.

USING THE COFFEE MAKER



1. Turn the lid counterclockwise and remove the lid with the stainless steel filter from the glass kettle.
2. Pour clean, cold water into the glass kettle up to the MAX mark.




WARNING:
NEVER FILL THE KETTLE ABOVE THE MAX MARK AS HOT FOAMY COFFEE CAN OVERFLOW DURING BREWING.

3. Unscrew the bottom of the stainless steel filter and pour in about 14 g of ground coffee (2 aligned measuring cups).



4. Screw the bottom of the stainless steel filter back on and make sure the filter is tightened securely. Check that the gasket is fitted.
5. Insert the stainless steel filter lid into the glass kettle so that the protrusion on the neck of the kettle is aligned with the open lock symbol. Then turn clockwise to the closed lock symbol.
6. Place the kettle on the base.
7. Plug the power cord plug into the mains socket.
8. Press the button  and the display will flash 1:00 and the button . Press

the button  repeatedly to set the desired extraction time: 1:00 – 2:00 – 3:00. Wait about 5 seconds and the coffee maker will start.


9. The numeric display will show the rising temperature.
10. When the temperature reaches approximately 95°C to 96°C, the spout draws in water and pumps it through the stainless steel filter to the top of the kettle, where extraction begins.
11. An audible alert sounds and the display starts counting down the set extraction time.


NOTE:

During the entire extraction period, the water in the kettle will almost boil and the coffee maker will cycle on and off. This is normal.

12. Once the set extraction time has elapsed, the extracted coffee is automatically pumped back into the bottom of the pot and the coffee maker switches to temperature retention mode. The display will start counting down the temperature retention time of 30 minutes. The coffee maker will maintain a coffee temperature of 80°C to 85°C.
13. If you remove the kettle from the base for more than 5 seconds during this time, the function will automatically cancel and an audible signal will sound.

NOTE:

You can cancel the brewing process and the preserve function at any time by pressing the button .

14. If you need to switch the temperature retention function back on, press the button  briefly and the display will start a new 30-minute countdown.

NOTE:

While the temperature retention function is switched on, the coffee machine is switched on and off periodically. This is normal. The coffee maker heats the coffee to the desired temperature.

15. Remove the kettle from the base and place it on a firm, dry and heat-resistant surface.
16. Turn the lid counterclockwise and very carefully remove the lid with the stainless steel filter from the glass kettle.



**WARNING:
NEVER RE-
MOVE THE LID
WHEN THE MA-
CHINE IS IN OPERA-
TION OR JUST AFTER
THE COFFEE HAS
FINISHED BREW-
ING. WAIT A FEW
SECONDS BEFORE
REMOVING THE LID.
WHEN REMOVING
THE LID, BE CARE-
FUL NOT TO SCRAPE
THE HOT STEAM.**



WARNING:
**THE STAIN-
LESS STEEL FILTER,
THE GROUND COF-
FEE USED AND THE
GLASS COFFEE KET-
TLE ARE VERY HOT.
TAKE EXTRA CARE
WHEN HANDLING
TO AVOID SCALD-
ING YOURSELF.**

17. Pour the finished coffee into cups and enjoy.
18. Allow the machine to cool sufficiently for at least 10 minutes before preparing again.



WARNING:
**NEVER POUR
COLD OR ICE-COLD
WATER INTO THE
HOT KETTLE. THIS
COULD DAMAGE IT.**

CARE AND CLEANING

Before cleaning the appliance, always unplug the power cord from the mains socket and allow it to cool sufficiently.

We recommend cleaning immediately after using the coffee machine to prevent deposits or stains.



WARNING:
**DO NOT
WASH THE GLASS
KETTLE, THE BASE,
ITS POWER CORD
OR THE POWER
CORD PLUG UNDER
RUNNING WATER
OR IMMERSE IT IN
WATER OR OTHER
LIQUIDS.**

CAUTION:

Do not use sharp objects, chemicals, thinners, petrol or other similar substances. Under no circumstances should the appliance be cleaned with a steam cleaner. No part of the coffee maker is dishwasher safe.

CLEANING THE GLASS KETTLE

Rinse the glass kettle with clean water and wipe dry. If the kettle is heavily soiled, you can use the supplied brush to remove the dirt.



**WARNING:
THE GLASS
KETTLE CAN RE-
MAIN HOT EVEN
AFTER THE CON-
TENTS HAVE BEEN
EMPTIED. TAKE EX-
TRA CARE WHEN
HANDLING THE KET-
TLE. ALWAYS GRASP
THE HANDLE OF THE
KETTLE.**

CLEANING THE LID, SEAL, STAINLESS STEEL FILTER AND MEASURING CUP

Allow the stainless steel filter to cool sufficiently.

Unscrew the bottom of the stainless steel filter and dispose of the used ground coffee in the municipal waste or you can compost it. Wash the lid, gasket, stainless steel filter and measuring cup in warm water with a little dishwashing liquid, rinse with clean water and wipe dry. Put the gasket back on the stainless steel filter.

CLEANING THE BASE

Wipe the base with a dry cloth.

STORAGE

Before storing, make sure that the appliance is clean, dry and completely cooled down. Store it in a well-ventilated, dry place out of reach of children and pets.

INSTRUCTIONS AND INFORMATION ON DISPOSING OF USED PACKAGING MATERIALS

Take the packaging material to a designated municipal waste facility.

DISPOSING OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to standard municipal waste. For proper disposal and recycling, take these products to designated collection points. Or in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. Correct disposal of this product helps save valuable natural resources and prevents damage to the environment caused by improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic devices, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.

Changes in the text, design and technical specifications may change without prior notice and we reserve the right to make these changes.

The original version is in the Czech language.

Manufacturer's address: FAST ČR, a.s., U Sanitasu 1621, Říčany CZ-251 01

Because of continuous improvement of design and other properties, your product may slightly differ from the one shown on the pictures in this manual.

Z důvodu neustálého zdokonaľování designu a dalších vlastností se může vámi zakoupený výrobek mírně lišit od výrobku uvedeného na obrázcích v tomto návodu.

Z dôvodu neustáleho zdokonaľovania dizajnu a ďalších vlastností sa môže vami kúpený výrobok mierne líšiť od výrobku uvedeného na obrázkoch v tomto návode.

A kivitel és más jellemzők állandó fejlesztése miatt a megvásárolt termék enyhén eltérhet az ezen útmutatóban található képeken mutatott terméktől.

Ze względu na ciągle udoskonalanie designu i innych właściwości, zakupiony produkt może się nieznacznie różnić od produktu przedstawionego na rysunkach w niniejszej instrukcji.

Из-за постоянного улучшения дизайна и других свойств ваш продукт может немного отличаться от представленного на рисунках в данном руководстве.

**WWW.CATLER.EU**