




**SANDWICH&PANINI MAKER**  
Translation of the original manual





**A**

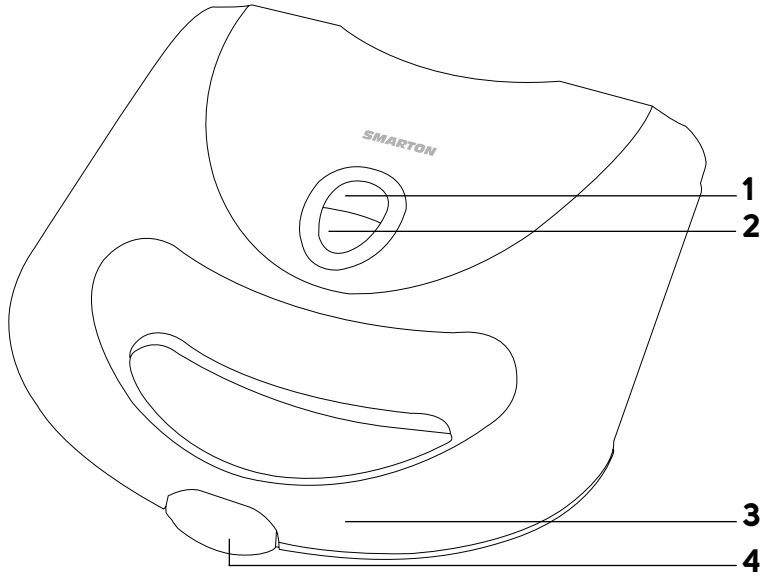

## Important safety instructions

### **READ CAREFULLY AND STORE FOR FUTURE USE.**

- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use the product in a safe manner and understand the potential dangers.
- Children must not play with the appliance.
- In the event that the power cord is damaged, have it repaired at a professional service centre to prevent causing a dangerous situation. It is forbidden to use the appliance if it has a damaged power cord.
- Cleaning and maintenance performed by the user must not be performed by children unless they are older than 8 years of age and under supervision.
- Children younger than 8 years of age must be kept away from the appliance and its power cord.
- Food surfaces that come into contact with food, need to be cleaned regularly. Proceed according to the instructions in chapter Cleaning and maintenance.
- This appliance is not designed to be controlled using a programmed device, external timer switch or remote control.



## Attention: Hot surface

The temperature of accessible surfaces may be higher if the appliance is in operation. Such surfaces may become hot during use. Do not touch the hot surface. This could cause skin burns. Use the handle to open and close the appliance.

- Before connecting the appliance to a power socket, check that the technical specifications on the appliance's rating label match the electrical voltage in the socket.
- Connect the appliance only to a properly grounded socket.
- The appliance is designed for household use only. Do not use it for commercial purposes.
- Do not use the appliance in industrial surroundings or outdoors.
- Do not use the appliance for any other purposes than those intended.
- Do not place the appliance on or near an electric or gas stove or other sources of heat.
- Do not place appliances on the edge of a workbench or on unstable surfaces. The appliance must be located on a stable and even surface.
- After connecting the appliance to a power socket, the baking surfaces and the outer surface of the appliance heats up. Do not touch the hot surface. To close and open the top baking plate use the thermally insulated handle and for removing the finished meal use a wooden or heat resistant plastic spatula.
- During operation, leave sufficient space around the appliance for air circulation. Do not place any items on to the hot surface of the appliance.
- Food may catch on fire during the cooking process, therefore check the sandwich maker regularly. If you notice smoke, disconnect the power plug from the socket and extinguish the fire.
- Always turn off the appliance and disconnect it from the power socket when leaving it without supervision or when not using it or before cleaning.
- Allow the appliance to fully cool down before moving, cleaning and storing it.
- Clean the baking plates after each use, see chapter Cleaning and maintenance.
- To avoid potential injury by electrical shock, do not clean the appliance under running water and do not submerge it in water or any liquid.
- Ensure that the power cord does not come into contact with water or moisture or a heated surface.
- Do not disconnect the appliance from the power socket by pulling on the power cord. This could damage the power cord or the power socket. Disconnect the cord from the power socket by gently pulling the plug of the power cord.
- To avoid the danger of injury by electrical shock, do not repair the appliance yourself or make any adjustments to it. Have all repairs or adjustments of the appliance performed at an authorised service centre. Tampering with the appliance during the warranty period may void the warranty.

Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use.

We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

### DESCRIPTION OF THE APPLIANCE

- A1** Red indicator light – indicates connection to the electrical power supply
- A2** Green indicator light – indicates that the sandwich maker is ready for use
- A3** Thermally insulated handles
- A4** Lock

### BEFORE FIRST USE

- Before first use, take the appliance and its accessories out of the packaging material and remove all promotional labels and stickers. Check that neither the appliance nor any of its parts is damaged.
- Tilt open the top cover of the sandwich maker and wipe the baking plates using a soft sponge lightly dipped in warm water. Then wipe dry using a clean wiping cloth. Make sure that both plates are clean and dry.
- Prior to use, we recommend wiping both plates with a small amount of vegetable oil. Spread evenly. Remove any excess oil using a kitchen paper towel.



#### Note:

When the sandwich maker is turned on for the first time, a light smoke or odour may be emitted. This is a normal event that will disappear with use.

### OPERATING THE APPLIANCE

- Insert the power plug into a power socket. A red indicator light **A1** will be lit and the sandwich maker will start heating up.
- While the sandwich maker is heating up, prepare the sandwiches.
- When the green indicator light **A2** turns on, the sandwich maker is ready for use.
- Release the lock **A4** and tilt open the top cover using the handle **A3**. Place the prepared sandwiches on to the baking plates.
- Carefully tilt down the top cover. Avoid using excessive force as this could damage the appliance. Secure the handle **A3** in place using the lock **A4**.
- Allow the sandwiches to bake for 2 – 3 minutes, as required. Regularly check the level of browning.
- As soon as the sandwiches have finished baking, tilt open the top cover using the handle **A3** and carefully remove the sandwiches using a wooden spoon or a suitable heat resistant plastic utensil. Never use metal or sharp objects. This could scratch the non-stick surface of the baking plates.
- Repeat this process with the remaining sandwiches.



#### Note:

During the baking process, the green indicator light **A2** will turn on and off. This is normal. The sandwich maker is heating up to operating temperature.

- When not using the sandwich maker, disconnect the power cord plug from the power socket and allow it to cool down before cleaning it.

### Sandwich making tips

- Always allow the sandwich maker to heat up to operating temperature.
- Use smaller bread slices when making sandwiches with a soft filling.
- Use butter to improve the taste of the sandwiches.
- Apply the rendered bacon fat on to bacon sandwiches. The sandwiches will be more delicious.
- We recommend using ice salad leaves, mint leaves, peppercress leaves, preserved olives, sliced onion, tomatoes, etc.
- When preparing sweet sandwiches with a fruit filling, sprinkle the outer part of the sandwich with a little sugar. The sandwich will be crunchier and will acquire a caramel flavour.

### CLEANING AND MAINTENANCE

- Disconnect the power plug from the power socket and allow the appliance to cool down before cleaning it.
- For cleaning, do not use cleaning products with an abrasive effect, solvents, etc. that could damage the appliance. Do not use steel wool or sponges with steel wool, etc. to clean the surface of the baking plates. No part of this appliance is intended for washing in a dishwasher.



#### Warning:

To prevent the risk of injury by electrical shock, do not submerge the appliance, power cord or power plug in water or any another liquid.

- Release the lock **A4** and tilt open the top cover using the handle **A3**. Wipe the baking plates with a soft sponge lightly dampened in warm water. Then wipe dry using a clean wiping cloth. Make sure that both plates are clean and dry.
- Wipe the external surface of the appliance using sponge lightly dipped in warm water. Then wipe dry using a clean wiping cloth.
- After cleaning them, we recommend wiping both plates with a small amount of vegetable oil. Spread evenly. Remove any excess oil using a kitchen paper towel.

### Storage

- When not using the appliance for an extended period of time, disconnect the power plug from the power socket, allow the appliance to cool down and clean it according to the instructions provided above.
- Before storing it, check that the appliance and all its accessories are thoroughly clean and dry.
- Store the appliance in a dry, clean and well-ventilated location not exposed to extreme temperatures and out of children's reach.

### TECHNICAL SPECIFICATIONS

Rated voltage range.....220 – 240 V-  
 Rated frequency.....50 / 60 Hz  
 Rated power input.....700 – 800 W

## **INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS**

Dispose of used packaging material at a site designated for waste in your municipality.

### **DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT**



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling, hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance. Correct disposal of this product helps save

valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

#### **For business entities in European Union states**

If you want to dispose of electric or electronic equipment, ask your retailer or supplier for the necessary information.

#### **Disposal in other countries outside the European Union.**

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.

