



FOOD CHOPPER

Instructions for use
FOOD CHOPPER

Návod k obsluze
SEKÁČEK POTRAVIN

Návod na obsluhu
SEKÁČIK POTRAVÍN

Használati útmutató
KONYHAI APRÍTÓ

Instrukcja obsługi
ROZDRABNIACZ ŻYWNOŚCI



FC 810

FOOD CHOPPER

TABLE OF CONTENTS

5	Catler recommends safety first
9	Know your FC 810 chopper
10	Operating your FC 810 chopper
14	Care and cleaning

A close-up, vertical view of a stainless steel chopper. The top part is a clear plastic lid. Below it is a black plastic control dial with a silver-colored ring. The dial has four settings: 'P' (Pulse), '0' (Off), '1' (Low speed), and '2' (High speed). The chopper body is made of brushed stainless steel.

Congratulations

on the purchase of your new FC 810 chopper.

Catler

CATLER RECOMMENDS SAFETY FIRST

We understand the importance of safety and that's why we put your safety first from the initial design concept to the production itself. Nevertheless, we ask you to be careful when using electrical equipment and to observe the following guidelines:

- This appliance is not to be used by children. Keep this appliance and its power cord out of children.
- This appliance may be used by persons with physical, sensory, mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers.
- Cleaning and maintenance performed by the user must not be performed by children.
- Children must not play with the appliance.
- If the power cord is damaged, ask the authorised service for a replacement in order to prevent hazards. It is forbidden to use the appliance with the power cord damaged.

WARNING: Improper use can cause injury.

- Take extra care when handling the chopping blades to avoid injury, especially when emptying the container and during cleaning.

- The containers for processing the ingredients can be washed in warm water with a little dishwashing liquid. Rinse and wipe dry.
- Always disconnect the appliance from the power socket if you are leaving it unattended and before assembly, disassembly or cleaning.
- Before replacing the accessories or accessible movable parts, please turn the appliance off and disconnect it from the power supply.
- This appliance is designed for home use only. This appliance is not designed for commercial use. Do not use this appliance in moving vehicles or on boats, outdoors, or for any purpose other than it's intended. Otherwise, there is a risk of personal injury.
- The appliance is not intended for use in premises such as:
 - staff kitchenettes in stores, offices and other workplaces;
 - hotel or motel rooms and other living areas;
 - agricultural farms;
 - bed and breakfast establishments.
- Do not submerge the appliance, power cord or plug in water or any other liquid.
- Make sure that the mains cord and plug does not come into contact with water or other fluid.
- Use the appliances according to the instructions in this user's manual. Otherwise injury, damage to the appliance or dangerous situation might occur.
- Do not use this appliance with a programmable switch, timer switch or any other device that automatically switches the appliance on.
- This appliance has been designed for the purpose of grinding roasted coffee beans, nuts, spices, herbs or poppy seeds. Never use the appliance for purposes other than those for which it was designed.
- This appliance is NOT designed to grind pre-ground coffee. Under no circumstances should the appliance be used to grind gluey food or extremely hard food, to make dough and grind fruit, to prepare curry paste, peanut butter, pesto, etc.
- Before connecting the appliance to a power socket, check that the nominal voltage on the appliance's rating label matches the electrical voltage in the socket.
- Connect the appliance only to a grounded socket. For safety reasons, we don't recommend using adaptor plugs or extension cords.
- Do not place the appliance on windowsills, sink drip tray or on unstable surfaces. Always place the appliance on an stable, flat and dry surface.
- Do not place the appliance on electric or gas cooker or in the vicinity of naked flame.
- Never use the appliance in the near vicinity of a bath, shower or swimming pool.
- Only use the appliance with the original supplied accessories.

- Always turn the appliance off and disconnect from the power socket if it's to be unused or left unattended, before disassembling or assembling, before filling the hopper or before moving or cleaning. Allow the appliance to fully cool down before cleaning or moving.
- Keep the appliance and its accessories in clean condition.
- Perform the cleaning and maintenance in accordance with the instructions in chapter Cleaning and maintenance. Never wash the appliance under running water or submerge it in water or another liquid.
- Do not switch on the appliance until it is correctly assembled. The appliance is equipped with a safety switch that prevents it from switching on if the lid is not properly fitted. Do not disable the safety switch. Do not attempt to operate the appliance without the lid properly fitted.
- Do not put your fingers or hands in the container. The blades of the knives are very sharp and there is a risk of serious injury if they are not handled correctly.
- Do not overfill the containers. Always observe the maximum line marked on each container. Excessive filling can impair the result, overloading the motor, which could lead to overheating and subsequent damage to the appliance.
- Do not operate the appliance for more than 2 minutes continuously as the appliance may overheat. If such situation occurs, please turn the appliance off and disconnect it from the power supply. Allow the appliance to cool down for 30 minutes, then try to turn it on again.
- Before connecting this appliance to a power socket, make sure the voltage stated on the product's rating label corresponds to the voltage in your power socket.
- Do not disconnect the appliance from the power socket by pulling on the power cord. This could damage the power cord or the power socket. Disconnect the cord from the power socket by gently pulling the plug of the power cord.

IMPORTANT SAFETY INSTRUCTIONS FOR USING ELECTRICAL EQUIPMENT

- Fully unwind the power cord before use.
- Do not leave the power cord hanging over the edge of a table or counter top or allow it to touch a hot surface or to become tangled up. Do not put heavy objects on the power cord.
- For safety reasons, we recommend to connect the appliance in an independent electrical circuit separated from other appliances. Do not use adapter plugs or extension cords to connect the appliance to a power outlet.
- To prevent electric shock, do not immerse the appliance, its base or the power cord in water or other liquids.
- We recommend that you check your appliance regularly. Do not use the appliance if it is damaged in any way or if the power cord or plug is defective. All repairs or adjustments must be performed at the nearest Catler authorised service centre.
- Any maintenance other than routine cleaning must be entrusted to an authorised Catler service centre.
- We recommend to install a residual current device (standard safety switches in your power outlet) to provide a higher level of protection when using the appliance. We recommend to install a residual current device (with a nominal residual operating current of no more than 30mA) in the electric circuit in which your appliance is to be connected. For further expert advice, please contact your electrician.

Instructions are also available at www.catler.eu.



Safety class for electric shock protection:

Class II – Electric shock protection is provided by double or heavy-duty insulation.

KNOW YOUR FC 810 CHOPPER



1. **Lid**
2. **Container with one built-in knife**
3. **Container with double built-in knife**
4. **Controller**
5. **Motor base**
6. **Feet with suction cups**
7. **Smoothie cup**
8. **Blades unit**
9. **Lid**

OPERATING YOUR FC 810 CHOPPER

BEFORE FIRST USE

Remove all packaging from the appliance and dispose of it in a proper manner. Before a proper disposal, make sure you have removed all accessories from the packaging.

Wipe the body of the chopper with a soft sponge lightly moistened in warm water and wipe dry.

Rinse the containers with the built-in knives with warm water and leave them to dry freely. You can wipe the interior dry with a clean cloth with the utmost care.

Wash the smoothie cup, blades unit and lid in warm water with a little dishwashing liquid. Rinse and wipe dry.



**WARNING!
BE VERY
CAREFUL WHEN
HANDLING THE
CONTAINERS AND
THE BLADES UNIT.
THE BLADES OF THE
KNIVES ARE VERY
SHARP AND THERE IS
A RISK OF SERIOUS
INJURY IF THEY ARE
NOT HANDLED COR-
RECTLY.**

ROTARY KNOB

The food chopper is equipped with three speeds.

- Speed 1: low speed
- Speed 2: high speed
- P speed: pulse speed

USE WITH CONTAINERS WITH BUILT-IN BLADES

1. Put the chopper on a flat, dry and clean surface.
2. Make sure all parts are dry and clean.
3. Insert the container into the motor base so that the cut-outs on the bottom edge of the container fit into the cut-outs in the motor base.
4. We recommend using the container with a single built-in blade for grinding roasted coffee beans and the container with a double built-in blade for grinding spices, nuts, herbs or poppy seeds.
5. Pour the ingredients you want to process into the container. Always observe the maximum line marked on each container.



WARNING!
EXCESSIVE FILLING CAN IMPAIR THE RESULT OF THE PROCESSING, OVERLOADING THE MOTOR, WHICH COULD LEAD TO OVERHEATING AND SUBSEQUENT DAMAGE TO THE APPLIANCE.

6. Fit the lid onto the motor base so that the tabs on the inner edge of the lid fit into the cutouts in the motor base. Turn the lid counterclockwise to secure it and activate the safety switch. The chopper cannot be switched on if the lid is not correctly fitted.
7. Insert the mains cord plug into a power socket.
8. Turn the rotary knob to select the desired speed: 1 (low speed) or 2 (high speed).
9. The pulse speed is used for fast processing of raw materials in short intervals at maximum speed. Turn the rotary knob to position P and hold the rotary knob in this position for the required time. When you return the rotary knob to position 0, the chopper stops.



WARNING!
DO NOT USE THE APPLIANCE FOR MORE THAN 2 MINUTES IN CONTINUOUS OPERATION.

10. When finished, turn the rotary knob to position 0, unplug the power plug from the mains socket and release the lid clockwise.

REMARK:

If you release the lid during processing, the chopper automatically switches off.

11. Wait for the chopping blades to stop. Then remove the container from the motor base and transfer the processed ingredients into a bowl.
12. To check the processing status, turn the control to position 0, unplug the power plug from the power outlet, wait for the chopping blades to stop and release the lid clockwise.



WARNING!
NEVER INSERT FINGERS, HANDS OR METAL UTENSILS INTO THE CONTAINER. THE BLADES OF THE KNIFE ARE VERY SHARP AND THERE IS A RISK OF SERIOUS INJURY IF THEY ARE NOT HANDLED CORRECTLY.

USE WITH SMOOTHIE CUP

1. Put the chopper on a flat, dry and clean surface.
2. Place the raw materials that you wish to process into the cup. Observe the maximum level line marked on the cup.
3. Screw the knife unit onto the cup. Tighten properly to prevent fluid leakage from the cup. The chopper will not start if the blades unit is not properly attached to the cup.
4. Turn the cup upside down and insert the cup with the blades unit into the motor base so that the cut-outs on the bottom edge of the knife unit fit into the cut-outs in the motor base.
5. Insert the mains cord plug into a power socket.
6. Turn the rotary knob to select the desired speed: 1 (low speed) or 2 (high speed).

7. The pulse speed is used for fast processing of raw materials in short intervals at maximum speed. Turn the rotary knob to position P and hold the rotary knob in this position for the required time. When you return the rotary knob to position 0, the chopper stops.
8. When finished, turn the rotary knob to position 0, disconnect the plug from the mains socket and remove the cup and blades unit from the motor base.
9. Turn the cup upside down so that the knife unit is pointing upwards. Carefully unscrew the blades unit and screw the lid onto the neck of the cup.



WARNING!
ALWAYS BE CAREFUL WHEN HANDLING THE BLADES UNIT. THE BLADES ARE VERY SHARP. THERE IS A SERIOUS RISK OF INJURY.

USE OF THE SMOOTHIE CUP

The smoothie cup is suitable for preparing delicious smoothies, other favourite drinks in the comfort of your home and taking it with you, for example, to the gym or to work, where you will be able to enjoy it. The smoothie cup can be used for preparing baby food, porridge, etc. The sealing of the lids and the design of the neck of the mug ensure that the processed food will stay fresh for a long time.

TIPS AND TRICKS

Regularly check the condition of the raw materials being processed. If the container is filled to the maximum, use the pulse speed first and then set the desired speed.

Grind the coffee beans so that the coarseness of the grind corresponds to the method of coffee preparation. If you prefer coffee with weaker taste, make the coffee as recommended, then pour some hot water in the cup.

If the ground coffee used is excessively fine, the coffee extraction may be very slow. The resulting coffee will be very over-extracted and very bitter. On the other hand, too coarsely ground coffee will speed up the extraction with the resulting coffee being under-extracted, slack and without strong taste.

The ground coffee will lose its taste and flavour very quickly. We recommend that you always use freshly ground coffee when making coffee.

Buy coffee beans in smaller packages with the roasting date stated.

To prolong the coffee bean freshness, store the coffee beans in an air-tight container in a cool, dark and dry place.

Cut the food into same-sized pieces of approx. 2.5 cm. This will speed up the preparation process.

Pour the liquids first, then add solid raw materials.

Always observe the maximum level line. If you need to process bigger amounts of food, always separate them to smaller portions.

NEVER mix any the following food: bones, large pieces of frozen food, thick and hard food, kernels, stones etc. Otherwise, the chopper might get irreparably damaged.

Keep the chopper in a clean condition.

CARE AND CLEANING

Before cleaning, unplug the power cord from the mains socket and let it to cool down properly.



WARNING!
TO PREVENT ELECTRIC SHOCK, DO NOT SUBMERGE THIS APPLIANCE, PLUG OR POWER CORD OR IN WATER OR ANY OTHER LIQUID. NO PART OF YOUR APPLIANCE IS SUITABLE FOR DISHWASHER USE.



WARNING!
DO NOT USE ABRASIVE CLEANING AGENTS, STEEL WOOLS, WIRE SPONGES ETC., AS THESE MIGHT DAMAGE THE SURFACE.

CLEANING THE MOTOR BASE

1. Remove the container from the motor base.
2. Wipe the motor base with a soft sponge lightly moistened in warm water and wipe dry.

CLEANING THE CONTAINERS

1. Pour the contents of the container into the jar.
2. Use a brush to remove any residual ingredients from the area around the knives. With the utmost care, you can wipe the inside with a dry cloth.



WARNING!
DO NOT TOUCH THE CUTTING BLADES. THE BLADES OF THE KNIFE ARE VERY SHARP AND THERE IS A RISK OF SERIOUS INJURY IF THEY ARE NOT HANDLED CORRECTLY.

3. To remove the unpleasant smell from the container, pour one tablespoon of baking soda into the container, leave it for a while and then empty and wipe very carefully with a dry cloth.

CLEANING THE SMOOTHIE CUP

It is important to clean the smoothie cup, blades unit and lid immediately after each use to prevent food residue from drying out. Regular maintenance will prolong the lifetime of your equipment.

Wash the blades unit under hot running water after use to remove the dirt. Rinse the cup under hot running water after use. Then, fill the cup about halfway with warm water. Screw on the knife unit and attach the blender base. Do not use any kitchen washing-up liquid.

Turn the chopper on high speed for about 10 seconds. This allows you to remove dirt from both the blades unit and the cup.

Carefully unscrew the knife unit and rinse under clean hot water. Wipe dry.

Wash the lid in warm water with a little dishwashing liquid. Rinse and wipe dry.

STORAGE

If the chopper is to be left unused, clean it according to the above instructions. Store the chopper in a well-ventilated dry place out of reach of children and animals.

INSTRUCTIONS AND INFORMATION ON DISPOSING OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSING OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal and recycling, take these products to designated collection points. Or in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. Disposing of this product correctly helps save valuable natural resources and prevents damage to the environment by improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic devices, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of the applicable EU directives.

The text, design and technical specifications may be changed without prior notice and we reserve the right to make these changes.

The original version is in the Czech language.

Manufacturer's address: FAST ČR, a.s., U Sanitasu 1621, Říčany CZ-251 01

NOTES

Because of continuous improvement of design and other properties, your product may slightly differ from the one shown on the pictures in this manual.

Z důvodu neustálého zdokonaľování designu a dalších vlastností se může vámi zakoupený výrobek mírně lišit od výrobku uvedeného na obrázcích v tomto návodu.

Z dôvodu neustáleho zdokonaľovania dizajnu a ďalších vlastností sa môže vami kúpený výrobok mierne líšiť od výrobku uvedeného na obrázkoch v tomto návode.

A kivitel és más jellemzők állandó fejlesztése miatt a megvásárolt termék enyhén eltérhet az ezen útmutatóban található képeken mutatott terméktől.

Ze względu na ciągłe udoskonalanie designu i innych właściwości, zakupiony produkt może się nieznacznie różnić od produktu przedstawionego na rysunkach w niniejszej instrukcji.

**WWW.CATLER.EU**