



Instructions for use  
TABLE BLENDER

## TABLE BLENDER



TB 820

# TABLE BLENDER

## TABLE OF CONTENTS

5	Catler recommends safety first
8	Know your table blender TB 820
9	Operating your table blender TB 820
13	Care and cleaning



# Congratulations

on the purchase of your new TB 820 table blender.



## CATLER RECOMMENDS SAFETY FIRST

We understand the importance of safety and so from the initial design concept to production itself we focus primarily on your safety. Nevertheless, please be careful and follow the instructions below when using the plate warmer.

- This appliance is not to be used by children. Keep this appliance and its power cord out of children.
- Appliances may be used by persons with reduced physical, sensory or mental abilities or lack of experience and knowledge, provided they are supervised or have been instructed in the safe use of the appliance and understand the potential hazards.
- Children must not play with the appliance.
- Cleaning and maintenance performed by the user must not be performed by children.
- If the power cord is damaged, have it replaced in a professional service centre in order to prevent a dangerous situation. It is forbidden to use the appliance with the power cord damaged.

**WARNING:** Improper use may result in possible injury. Pay attention when handling the cutting blades, especially when removing the blades from the container, emptying the container and during cleaning.

- Clean the parts of the appliance that come into contact with food according to the instructions in this manual. Wash the cups, blades unit and lids in warm water with a little dishwashing liquid. Rinse and wipe dry.
- Always disconnect the appliance from the power socket if you are leaving it unattended as well as before assembly, disassembly or cleaning.

- Before replacing the accessories or accessible movable parts, please turn the appliance off and disconnect it from the power supply.
- Before plugging the power cord plug into the mains socket, make sure that the voltage on the type plate matches the voltage in your mains socket.
- Remove packaging material and advertising labels before use.
- This appliance is designed to process common household foods. Do not use it for any purpose other than that for which it is intended in an industrial or laboratory environment.
- Do not place the appliance on window sills, draining board or unstable surfaces, or place it on an electric or gas stove or near an open flame or another heat source. Place the appliance only on a dry, clean and stable surface where it cannot be knocked over.
- Only use the appliance with original accessories from the manufacturer.
- Make sure the power cord does not hang over the edge of a table or that it does not touch a hot surface.
- Before starting the appliance, make sure that the appliance is correctly assembled and the lid is properly fitted.
- Always observe the maximum level line when filling the container with food. Do not exceed the maximum amount. There is a risk of engine damage and ingredients spillage. It would also reduce the performance of the appliance. The processed ingredients gain volume during processing.
- Do not operate your blender continuously with large batches for longer than 1 minute. Allow the motor to rest for at least 2 minute between each use.
- If the food gets stuck around the blades unit, press the On / Off button to turn the blender off and wait until the knife unit has come to a complete stop. Then, unplug the power cord from the socket and use a spoon or a spatula to remove the food from the blades unit. Never use your fingers because the blades are very sharp.
- Keep your hands, fingers, garments, spoons and other kitchenware out of the appliance during operation. Before removing the lid, always turn the appliance off and unplug the power cord from the socket and wait until the blades have stopped. Avoid contact with moving parts.
- During operation, do not remove the container from the body.
- No part of the appliance is intended for use in a microwave oven.
- Do not mix carbonated drinks. This may lead to their damage.
- Do not put any part of the appliance in a gas, electric or microwave oven or on a hot gas or electric range.
- A connected power outlet must be easily accessible for possible sudden disconnection.
- Do not use this appliance with a programmable switch, timer switch or any other device that automatically switches the appliance on.
- Do not use the appliance near water sources like a kitchen sink, bathroom, swimming pool etc.
- Never touch the appliance with wet or damp hands.
- Always wait until the rotating parts come to a complete stop.
- If the appliance is in operation, do not leave it unattended.
- When handling the blades unit, be very careful not to get injured with their edge. The blades unit is very sharp.

- Do not turn the appliance on without load. It is in danger of overheating.
- Do not use the appliance with a damaged blades unit, a cooking spoon or any other foreign object inside the pot.
- Do not process boiling or hot ingredients. Do not expose the appliance and its parts to extreme temperatures, e.g. do not pour hot liquids into a cold container.
- Avoid spilling water or other fluid onto the mains cord and plug.
- Do not use rough abrasive or caustic detergents to clean the appliance.
- Keep your appliance clean. Follow the cleaning instructions provided in this user's manual.
- Do not store or use any explosive and/or flammable substances inside or in the vicinity of this appliance, such as flammable gas sprays.
- To disconnect the appliance from the power outlet, always hold the cord plug, not the cord itself while pulling.

### **IMPORTANT SAFETY INSTRUCTIONS FOR USING ELECTRICAL EQUIPMENT**

- Fully unwind the power cord before use.
- Do not leave the power cord hanging over the edge of a table or countertop or allow it to touch a hot surface or to become tangled up. Do not put heavy objects on the power cord.
- For safety reasons, we recommend to connect the appliance in an independent electrical circuit separated from other appliances. Do not use adapter plugs or extension cords to connect the appliance to a power outlet.
- To prevent electric shock, do not immerse the appliance, its base or the power cord in water or other liquids.
- We recommend that you check your appliance regularly. Do not use the appliance if it is damaged in any way or if the power cord or plug is defective. All repairs or adjustments must be performed at the nearest Catler authorised service centre.
- Any maintenance other than standard cleaning must be performed at authorised Catler service centre.
- We recommend to install a residual current device (standard safety switches in your power outlet) to provide a higher level of protection when using the appliance. We recommend to install a residual current device (with a nominal residual operating current of no more than 30mA) in the electric circuit in which your appliance is to be connected. For further expert advice, please contact your electrician.

Instructions are also available at **[www.catler.eu](http://www.catler.eu)**.



This symbol indicates that the appliance has double insulation between the dangerous mains voltage and the parts accessible to the user. In the case of servicing, use only identical spare parts.

## KNOW YOUR TABLE BLENDER TB 820



1. **Measuring cup**
2. **1.5 l glass mixing container**
3. **Built-in blades unit**
4. **Rotary control for on/off/speed setting**
5. **PULSE button**
6. **ICE CRUSHING button**
7. **Lid of glass container**
8. **Glass container handle**

9. **Blender base**
10. **SMOOTHIE button**
11. **Antiskid feet**
12. **Stainless steel container lid**
13. **Stainless steel container with built-in blades unit**
14. **Stainless steel container handle**



## OPERATING YOUR TABLE BLENDER TB 820

### BEFORE FIRST USE

Before first use, remove all packaging and advertising labels / stickers from the appliance.

Check the appliance and all the accessories for damage. Never use a damaged appliance and/or appliance with damaged accessories, damaged power cord or plug.

Wipe the motor base with a soft sponge slightly moistened in warm water. Before using for the first time, rinse the glass and stainless steel container with warm water and carefully wipe dry with a clean cloth or allow to dry freely. Do not immerse containers in water. Wash both lids and the measuring cup in warm water with a little kitchen detergent, rinse and wipe dry.



**WARNING!  
BE VERY  
CAREFUL**

**WHEN HANDLING THE  
BLADES UNIT. THE  
BLADES ARE VERY  
SHARP.  
TO PREVENT  
SERIOUS INJURIES OR  
AMPUTATION, NEVER  
INSERT YOUR FINGERS  
OR HANDS IN THE  
BLENDING BEAKER  
WHILE THE BLENDER IS  
IN OPERATION.**

### BLENDER COMPOSITION

1. Place the blender base on stable, firm and clean surface. Push down slightly on the base to press the non-slip feet against the worktop.
2. The base is equipped with switches that prevent the blender from starting if the glass or stainless steel container is not properly secured in the base. Also, if the container is released from the switches, the blender stops running.
3. Insert the glass or stainless steel container into the base so that the protrusions at the bottom fit into the switches. Then turn clockwise until you feel resistance and a short click. The handle of the container should point to the right.
4. Place the ingredients that you wish to process into the jar. Always observe the maximum level line.
5. Fit the lid of the glass container onto the glass container so that the protrusions on the glass container are aligned with the cut-outs on the lid. Turn the lid clockwise until you feel resistance. When putting it on, make sure that the half-round protrusion covers the spout of the glass container in the front part.
6. Insert the measuring cup into the glass lid and turn it clockwise to secure it in the lid.
7. Fit the lid of the stainless steel container so that one of the outer protrusions on the lid is aligned with the switch in the handle of the stainless steel container. Turn the lid clockwise until the protrusion fits into the switch. Rotate the lid with reasonable force, as it may be difficult to put the lid on initially.
8. The blender is all set now.



**WARNING!**  
**THE BLENDER**  
**WILL NOT**  
**START UNLESS**  
**IT IS ASSEMBLED**  
**CORRECTLY.**

**Remark:**

To disassemble, perform the procedure in reverse order.

**USE**

1. Make sure the blender is assembled correctly and the ingredients you want to process are in the container.
2. Make sure the rotary control is in the OFF position.
3. Insert the mains cord plug into a power socket.
4. Turn the rotary control to the ON position and the buttons will light up.
5. Turn the rotary control to the MIN position and the blender will start at the lowest speed. The rotary control will light up.
6. Turn the rotary control clockwise to continuously increase the speed up to the MAX position (highest speed).
7. Once the food is processed, turn the control to the OFF position, wait for the blades unit to come to a complete stop and unplug the power plug from the mains socket.
8. If you need to check the status of the ingredients being processed, turn the control to the OFF position, wait for the blades unit to come to a complete stop and unplug the power plug from the mains socket. Carefully remove the lid and check the condition of the ingredients. Then continue processing.

9. If you need to add ingredients to the glass container, reduce the speed to MIN and carefully remove the measuring cup. Through the opening in the lid you will be able to add the ingredients. Then put the measuring cup back on and secure. Adjust the speed as needed.
10. If you need to add ingredients to the stainless steel container, turn the control to the OFF position, wait for the blades unit to come to a complete stop, and unplug the power plug from the mains socket. Pull the rubber lock in the lid to release any vacuum that may build up in the container, especially if you are preparing hot ingredients. Remove the lid and add the ingredients. Then put the lid back on and continue processing.



**WARNING!**  
**BEFORE**  
**TURNING**  
**THE BLENDER ON,**  
**PLEASE MAKE SURE**  
**THAT THE LID IS**  
**SECURELY ATTACHED**  
**ON THE CONTAINER.**  
**OTHERWISE, FOOD**  
**MIGHT SPRING OUT**  
**WHEN THE BLENDER IS**  
**TURNED ON.**

**Remark:**

If food gets stuck around the knife unit, turn the control to OFF position and wait until the blades unit comes to a complete stop. Then, unplug the power cord from the socket and use a spoon or a spatula to remove the food. Never use your fingers or hands because the blades are very sharp.

### **PULSE Function**

The PULSE function is used for fast processing of raw materials in short intervals at maximum speed.

Turn the rotary control to the ON position. Press and hold the **PULSE** button. The blender will start. When you release the button, the blender stops.

### **Crunch Ice**

Place ice cubes (maximum 8 cubes with a 2 cm edge) in a glass container.

Turn the rotary control to the ON position. Press the **ICE CRUSHING** button and the blender will start at the preset speed.

Once the ice is chopped to your requirements, press the **ICE CRUSHING** button again and the blender will stop. The maximum ice crushing time is 60 seconds. The blender then switches off automatically.

### **SMOOTHIE function**

Place the ingredients for the smoothie in the container.

Turn the rotary control to the ON position. Press the **SMOOTHIE** button and the blender will start at the preset speed.

Once the ingredients are processed to your requirements, press the **SMOOTHIE** button again and the blender will stop.

The maximum time of the **SMOOTHIE** function is 60 seconds. The blender then switches off automatically.



**WARNING!**  
**DO NOT BLEND BOILING OR HOT FOODS. THIS MAY LEAD TO UNDERPRESSURE CREATION INSIDE THE BEAKER, CAUSING THE CONTENT TO SPRING OUT WHEN OPENING THE LID. OTHERWISE, BURNS MIGHT OCCUR. ALWAYS ALLOW THE FOOD TO COOL DOWN TO 45°C. NEVER TURN THE BLENDER ON IF THE LID OR THE MEASURING CUP IS NOT ATTACH.**

### **Safety Thermal Fuse**

Your blender is equipped with safety thermal fuse to protect the motor from damage.

If you put excessive load on the blender, such as processing a higher amount of raw materials for a prolonged period of time, automatic safety thermal fuse will trip to stop the motor. In such case, turn the blender off by the main switch and unplug the mains cord from the power outlet. Allow the blender to cool down for about 15 minutes. Then insert the power plug into a power outlet and turn the blender on. If the blender malfunctions, stop using it and contact your authorized Catler service centre.

### **Food Making Tips and Techniques**

Cut the food into same-sized pieces of approx. 2.5 cm. This will speed up the preparation process.

Pour the liquids first, then add solid raw materials.

Always observe the maximum line when inserting ingredients.

If you need to process bigger amounts of food, always separate them to smaller portions.

NEVER mix any the following food in the blender: bones, large pieces of frozen food, thick and hard food, kernels, stones etc.

Otherwise, the blender might get irreparably damaged.

The stainless steel container is suitable for mixing baby food, smaller amounts of ingredients, chopping nuts, herbs, etc.



**WARNING!  
DO NOT  
PROCESS  
DRY FOOD WITHOUT  
LIQUIDS. THIS  
BLENDER IS NOT  
DESIGNED TO PROCESS  
DRY FOOD ONLY.**



**WARNING!  
FOLLOW THE  
INSTRUCTIONS  
PROVIDED IN THIS  
USER'S MANUAL.  
OTHERWISE, THE  
BLENDER MIGHT GET  
DAMAGED, LEADING  
TO PROPERTY DAMAGE  
OR PERSONAL  
INJURIES.**

## CARE AND CLEANING

Before cleaning the appliance, always disconnect the plug of the power cord from the mains socket and let it to cool down properly.

It is necessary to clean the blender immediately after each use to prevent possible drying of food residues in the beaker, on the blades unit, lid or inside the measuring cup. Regular maintenance will prolong the lifetime of your blender.



**WARNING!  
DO NOT  
WASH THE  
APPLIANCE, MAINS  
CORD AND PLUG  
UNDER RUNNING  
WATER AND DO NOT  
IMMERSE IT IN WATER  
OR ANY OTHER LIQUID.**

### Disassembling the Mixer

1. Unplug the power cord from the mains outlet and wait until blades unit has come to a complete stop.
2. Turn the container counterclockwise to release it from the base switches and carefully remove it from the blender base.
3. Carefully remove the lid.
4. The lid of the stainless steel container is fitted with a rubber lock, which you pull to release any vacuum that may build up in the container, especially if you are preparing hot ingredients.



**WARNING!  
BE CAREFUL  
WHILE  
HANDLING THE  
CONTAINER WITH HOT  
INGREDIENTS INSIDE.  
CAREFULLY REMOVE  
THE LID AS HOT STEAM  
MAY ESCAPE WHILE  
OPENING. THERE IS A  
DANGER OF A BURNS.**

### Cleaning the Lids and the Measuring Cup

Wash the lids and the measuring cup under warm running water after use to remove the dirt.

For a more thorough cleaning, wash them in warm water with a little dishwashing liquid. Rinse and wipe dry.

### Cleaning the Containers

Rinse used containers with warm water to remove dirt.

Pour about 500 ml of warm water with a little dishwashing liquid into the container. Attach the lid and then attach the assembly on the blender base.

Turn the rotary control to the ON position and set the highest speed, or press the **PULSE** button to remove debris around the blades unit.

Rinse the beaker out in clean water then and wipe dry.

Handle the container with care. Do not expose the beaker to extreme temperatures, pressure etc.

You can also use a kitchen brush to clean the blades unit.



**WARNING!  
BE VERY  
CAREFUL**

**WHEN HANDLING THE  
BLADES UNIT. THE  
BLADES ARE VERY  
SHARP.  
TO PREVENT  
SERIOUS INJURIES OR  
AMPUTATION, NEVER  
INSERT YOUR FINGERS  
OR HANDS IN THE  
BLENDING BEAKER  
WHILE THE BLENDER IS  
IN OPERATION.**

**Warning:**

For cleaning, do not use sharp objects, chemicals, thinners, dissolvents, petrol or other similar substances. Never clean your table blender with a steam appliance.

**STORAGE**

Before storing, make sure that all parts are clean and dry. Store your blender in a horizontal position in a dry and well-ventilated place. Do not place any objects on your blender. Always make sure that the blades unit is stored out of children's reach.

## INSTRUCTIONS AND INFORMATION ON DISPOSING OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

### DISPOSING OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal and recycling, take these products to designated collection points. Or in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. Disposing of this product correctly helps save valuable natural resources and prevents damage to the environment by improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

#### **For business entities in European Union states**

If you want to dispose of electric or electronic devices, ask your retailer or supplier for the necessary information.

#### **Disposal in other countries outside the European Union**

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of the applicable EU directives.

The text, design and technical specifications may be changed without prior notice and we reserve the right to make these changes.

The original version is in the Czech language.

Manufacturer's address: FAST ČR, a.s., U Sanitasu 1621, Říčany CZ-251 01



# TABLE BLENDER

Because of continuous improvement of design and other properties, your product may slightly differ from the one shown on the pictures in this manual.



[WWW.CATLER.EU](http://WWW.CATLER.EU)

CUSTOMER SERVICE • ZÁKAZNICKÝ SERVIS • ZÁKAZNICKÝ SERVIS • ÜGYFÉLSZOLGÁLAT • SERWIS KLIENTA

[INFO@CATLER.EU](mailto:INFO@CATLER.EU)